


Vertical Wall Viewing Systems

Optimized Systems for Accurate Large Format Color Viewing

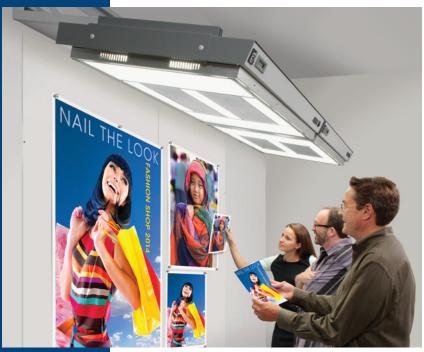

GLE-1032PH luminaires

Quality from today's large format printers is excellent. However, output often needs to be viewed in controlled conditions to ensure accurate color matches and fidelity, and to maintain brand integrity. GTI has the design expertise and product portfolio to configure an ISO 3664:2009 D50 compliant large format vertical viewing area to fit your unique requirements.

To deliver proper light intensity and uniformity over a large vertical viewing surface, an optimized system of overhead luminaires, viewing lamps, and accessories (wall panels, neutral gray paint, and mounting brackets) is required.



GLL-1032e/PH luminaires

GTI Vertical Wall Systems Feature:

- An innovative parabolic lens
- Easy-to-install wall brackets precisely position luminaires for superior viewing
- Graphiclite® 5000K lamps
- Available wireless remote
- LiteGuard II System monitoring to assure proper maintenance of GLE series luminaires is available
- Custom Munsell N8/ neutral gray metal wall panels
- Ability to order as a single-source, dual-source, or multi-source fixture

Graphiclite Luminaires

Luminaires are the key component of a vertical wall viewing system. GTI's Graphiclite luminaires feature an innovative parabolic lens and geometry design that provide superb light uniformity over a large vertical area. All GTI luminaires utilize Graphiclite 100 Color Viewing Lamps and are engineered to provide precisely balanced D50 output.

Luminaires are available in two styles. The GLE series has a thin profile which is ideal for conference rooms and design studios. The GLL series is designed for color viewing in production areas. Luminaires are configured with single-source D50 lighting as a standard. Dual-source or multi-source luminaires to simulate home and store lighting conditions are available. Fixtures can be ordered in four or five foot lengths. A wireless remote control is available for all fixtures. For soft proofing applications, a digital dimming feature is available on four foot models.

Graphiclite 100 Color Viewing Lamps

GTI's Graphiclite 100 lamps provide the highest degree of accuracy. All Graphiclite lamps are manufactured with a unique blend of fluorescent phosphors resulting in a superior D50 spectrum. Proper color rendition is accomplished by tightly matching industry D50 standards. Graphiclite lamps deliver a much tighter compliance to industry viewing standards than other 5000K lamps. (See a graphic comparison on reverse.)


graphic**lite**®



39.875"

Vertical Wall Viewing Systems

Superior Lighting Where Color is a Critical Aspect of Your Business

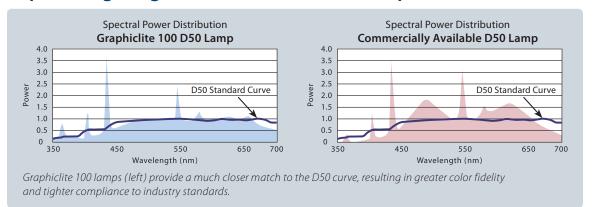

Mounting Options

Proper viewing conditions require that luminaires be mounted correctly. GTI's wall mounting brackets are designed to optimize your viewing area and to ensure a secure installation. For extra large viewing areas or maximum uniformity, several luminaires can be mounted side by side, and a lower luminaire can be mounted on a rolling floor stand.

Wall Panels

GTI's custom Munsell N8/ neutral gray panels are mounted to the wall. Panels up to four foot by eight foot are available. For larger areas, multiple panels can be placed edge to edge. Panels feature a steel viewing surface to allow the use of magnets (included) to hold artwork. Munsell N8/ neutral gray paint is available for background walls.





GTI's GLE (left) and GLL (right) series luminaires, shown with wall brackets, are available in 4 and 5 foot models. GLE luminaires have a front power switch and a power cord which plugs into a standard outlet. GLL luminaires must be hard wired into a switched power circuit. Both models are available with a wireless remote control.

Specifications/Model Numbers

Luminaires		OPTIONS		
Model No.	Length	Dimming for Soft Proofing	LiteGuard II*	Wall Bracket
GLE-1032PH	4'	Yes	Yes	WB-GLE/32
GLL-1032e/PH	4'	Yes	No	WB-GLL/32e
GLE-1040PH	5'	No	Yes	WB-GLE/40
GLL-1040e/PH	5'	No	No	WB-GLL/40e

^{*} Must be ordered with unit

Wireless remote is available with all luminaires. Must be ordered with unit.

Accessories

N8/G	One Gallon–Munsell N8/ neutral gray paint
GTIMAGNET	Powerful, easy-to-grip magnet

Munsell N8/ Neutral Gray Wall Panels

Model No.	Size	
WP-4896*	48" × 96"	
WP-4848*	48" × 48"	
WP-4830*	48" × 30"	
Custom sizes available		

^{*} Includes 4 magnets

Please contact us directly if you require additional information or assistance configuring your vertical wall system.



Tel: 1-888-562-7066 • Email: sales@gtilite.com • www.gtilite.com

GTI Graphic Technology, Inc. | 211 Dupont Avenue, P.O. Box 3138 | Newburgh, New York 12550 **GTI GmbH** | Tel: +49 4462 94 67 90 | www.gti-normlicht.de

Graphic Technology (U.K.) Ltd. | Tel: +44 1924 277444 | www.graphictec.co.uk